


YOUTHFUL SWITCH

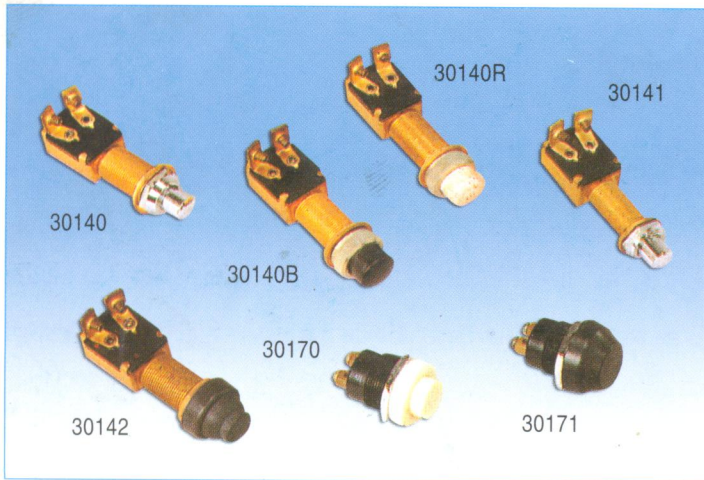


PUSH BUTTON SWITCH

- 30140** 12V, ϕ 16mm x 32mm (L)
Brass chrome plated knob
- 30140B** With black rubber cap
- 30140R** With red rubber cap

PUSH BUTTON SWITCH

- 30141** 12V, ϕ 12.7mm x 32mm(L)
Brass chrome plated knob
- 30142** 12V, ϕ 16mm x 32mm(L)
Brass chrome plated knob with rubber cap
- 30170** 12V
- 30171** With rubber protector

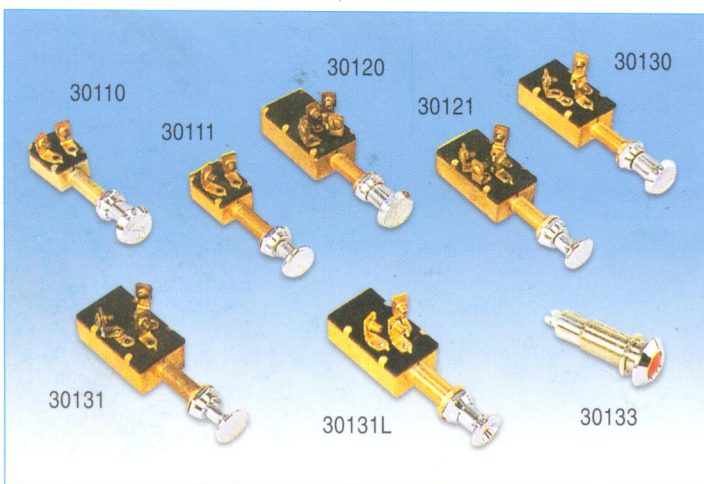

PUSH PULL SWITCH

- 30133** Red led indicator light

PUSH PULL SWITCH

- Two position 12V/20A, ϕ 9.5mm x 30mm(L)
- 30110** Chrome plated plastic knob
- 30111** Chrome plated brass knob
- Three position 2 circuit, 12V/20A, ϕ 9.5mm x 30mm(L)
- 30120** Chrome plated plastic knob
- 30121** Chrome plated plastic knob
- Three position 12V/20A, ϕ 9.5mm x 30mm(L)
- 30130** Chrome plated plastic knob
- 30131** Chrome plated brass knob
- 30131L** Chrome plated brass knob with red led indicator light

TOGGLE SWITCH TWO POSITION

- 30160** 12V/10A Brass chrome plated
- 30161** 12V/5A On-off, plastic paddle

TOGGLE SWITCH THREE POSITION

- 30162** 12V/15A On-off-on, plastic paddle

TOGGLE SWITCH TWO POSITION

- 30167** Illuminated 12V/16A on-off red glow paddle

TOGGLE SWITCH TWO POSITION

- 30168** 12V/16A On-off with red led indicator light

10510FH

Fuse holder for 10510

10510FHF

Fuse holder with 15A fuse

10560FH

Fuse holder for 10560

10560S

Rocker switch illuminated for 10560

