

**SOCKET & PLUG**

- 15190** Plug uses for deck socket & cigarette lighter.
- 15191** Socket & plug (15191P+15191S)
- 15191P** Plug only
- 15191S** Socket only

**DECK SOCKET**

 
 
- 22330**

**CIGARETTE LIGHTER**

- 30801**
- 30801P** W/plate and wire
- 30802**


**DRIVE ALERT WITH AROMA**

- 15192**
- Cigarette plug: DC 12V 0.1A
- Cartridge: 15/16" x 1/4" x 1/8"
- 15192-DA01** Red led
- 15192-DS01** With on/off switch, green led
- 15192-DA06** Fragrance pad

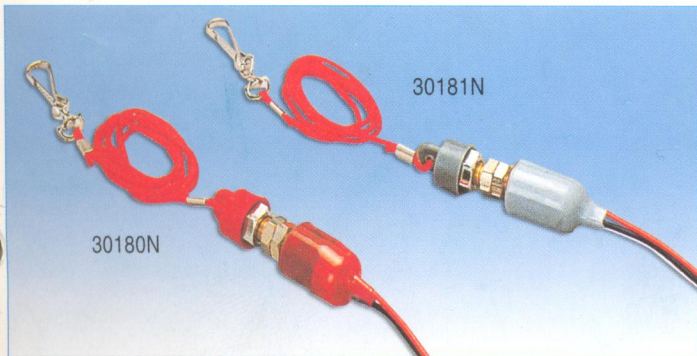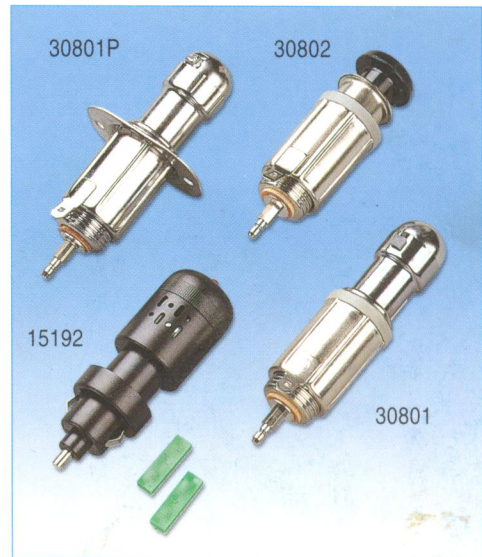

**SAFETY TETHER SWITCH**

 - 12V/15A
- 30180N** Off red silicon cap - On when pulled
- 30181N** On gray silicon cap Off

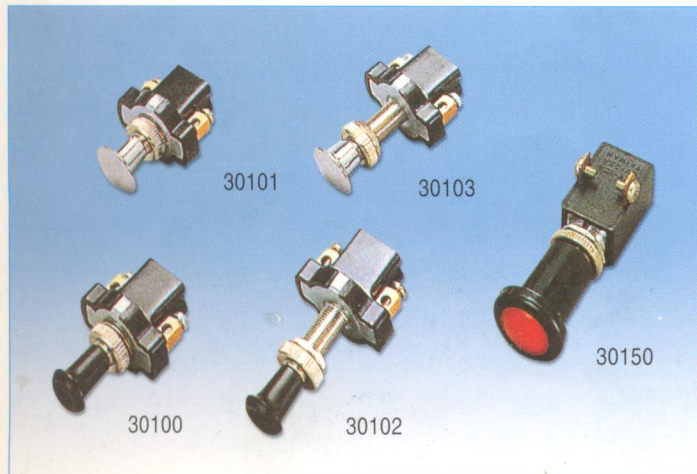

**PUSH PULL SWITCH**

- Two position 12V/5A,  $\phi$  8mm x 7mm(L)
- 30100** Plastic knob
- 30101** Brass chrome plated knob

**PUSH PULL SWITCH**

- Two position 12V/5A,  $\phi$  8 x 20(L)
- 30102** Plastic knob
- 30103** Brass chrome plated knob

**PUSH PULL SWITCH**

- 30150** 12V/15A Illuminated